

BlueDAC™

Quick Start Guide



CEEntrance

On/Off and CHARGING

1. Attach USB charger cable to the USB jack labeled ⚡🎵
2. Hold power button ⏻ for 1 sec to turn BlueDAC On/Off
3. Two LEDs above the power button show On/Off status and charging status as follows:

- ☀️ 🔋 ☀️ BlueDAC is on, battery is charging
- ☀️ 🔋 ● Blinks if battery is < 3%; connect charger
- 🔋 ☀️ BlueDAC is off, battery is charging
- 🔋 ● BlueDAC is off or battery is fully charged

4. For best results, use a 1.5A or better wall charger

SELECTING BLUETOOTH

1. Turn on BlueDAC, it will wake up in Bluetooth mode
2. Using your cell phone's Bluetooth setup, find "CEEntrance B1" and select it for playback
3. Two LEDs by the Bluetooth symbol indicate as follows:

- ☀️ ☀️ 📶 Bluetooth not connected (LEDs alternate)
- ☀️ 📶 Bluetooth music is streaming (blinking)

4. Attach your headphones and start playback
5. Adjust volume with the volume wheel
6. For In-Ear Monitors, use LOW GAIN
7. For High-Impedance Headphones, use HIGH GAIN

SELECTING USB

1. Turn on BlueDAC and push ⏻ to select USB input
2. Connect USB source, adjust volume and start playback
3. Two LEDs by the USB symbol indicate as follows:

- ☀️ ● 📶 USB input is selected (solid)
- ☀️ ☀️ 📶 USB music is streaming (solid)

FEATURES

1. For best noise performance as well as a higher output level, BlueDAC features a separate balanced output on the 2.5mm jack.
2. GAIN switch is recessed to avoid accidental bumping. A paperclip or a pen works well to set the switch.
3. To set output to LINE level, set the GAIN switch to HIGH and set volume wheel to maximum.
4. Input switch ⏻ toggles between USB and Bluetooth
5. BlueDAC's high-capacity battery requires a wall charger. Computer USB ports won't charge BlueDAC properly.

TROUBLESHOOTING

Problem	Solution
Unit doesn't turn on	- Plug in a USB wall charger (1.5A or better) - When a wall charger is plugged in, unit will work even with a fully discharged battery
No sound in headphones	- Make sure the unit is on, headphones are connected - Make sure Bluetooth/USB source is playing - Check the volume level on your cell phone
Sound is too loud	- Set the GAIN switch to LOW - Adjust the volume wheel

DRIVER DOWNLOAD

For Windows use, download the CEEntrance Universal Driver from our website: www.centrance.com/downloads/ud

CEEntrance and BlueDAC are trademarks of CEEntrance. Other trademarks are property of their respective owners. © CEEntrance Inc. All rights reserved. www.centrance.com